

**EMISSIONS TEST REPORT**

**RECEIVED**

APR 02 2024

AIR QUALITY DIVISION

for

**40 CFR Part 63, Subpart YYYY**

**FORMALDEHYDE (CH<sub>2</sub>O)**

**EUTURBINE1, EUTURBINE2, & EUTURBINE3**

**MI-ROP-B7221-2020**

**DTE Gas Company – Milford Compressor Station**

**Milford, Michigan**

**February 20-22, 2024**

Prepared By:

Environmental Management & Safety  
Ecology, Monitoring, and Remediation

DTE Corporate Services, LLC

7940 Livernois G4-S

Detroit, MI 48210

**DTE**



## CONTENTS

<u>Section</u>	<u>Page</u>
EXECUTIVE SUMMARY .....	IV
1.0 INTRODUCTION .....	1
2.0 SOURCE DESCRIPTION .....	1
3.0 SAMPLING AND ANALYTICAL PROCEDURES .....	1
3.1 OXYGEN (USEPA METHOD 3A).....	2
3.1.1 Sampling Method.....	2
3.1.2 Sampling Train.....	2
3.1.3 Sampling Train Calibration .....	2
3.1.4 Sampling Duration & Frequency .....	2
3.1.5 Quality Control and Assurance.....	3
3.1.6 Data Reduction.....	3
3.2 FORMALDEHYDE (CH <sub>2</sub> O) (USEPA METHOD 320).....	3
3.2.1 Sampling Method.....	3
3.2.2 Sampling Train Calibration .....	3
3.2.3 Quality Control and Assurance.....	5
3.2.4 Data Reduction.....	5
4.0 OPERATING PARAMETERS .....	6
5.0 RESULTS .....	6
6.0 CERTIFICATION STATEMENT .....	7

# DTE

## RESULTS TABLES

Table No. 1.....	EUTURBINE3 CH <sub>2</sub> O Test Results
Table No. 2.....	EUTURBINE1 CH <sub>2</sub> O Test Results
Table No. 3.....	EUTURBINE2 CH <sub>2</sub> O Test Results

## FIGURES

1	EUTURBINE1-3 Stack Drawing & Sampling Location
2	USEPA Method 3A/320 Sampling Train

## APPENDICES

A	EGLE Test Plan
B	Raw Analyzer Data
C	Equipment and Analyzer Calibration Data
D	Example Calculations
E	Operational Data
F	FTIR Data Validation Report



## EXECUTIVE SUMMARY

DTE Energy's Environmental Management and Safety (EM&S) Ecology, Monitoring, and Remediation performed emissions testing at the DTE Gas Company – Milford Compressor Station, located in Milford, Michigan. The fieldwork, performed February 20-22, 2024, was conducted to satisfy requirements of the Michigan Department of Environment, Great Lakes, and Energy (EGLE) Michigan Renewable Operating Permit MI-ROP-B7221-2020 and 40 CFR Part 63 Subpart YYY. Emissions tests were performed on Solar Turbines 2100 (EUTURBINE1), 2200 (EUTURBINE2), and 3100 (EUTURBINE3) for formaldehyde (CH<sub>2</sub>O).

The results of the emissions testing are highlighted below:

**Emissions Test Results  
Milford Compressor Station  
EUTURBINE1, EUTURBINE2, and EUTURBINE3  
February 20-22, 2024**

<b>Emission Unit</b>	<b>O2 (%)</b>	<b>CH2O (ppbvd @ 15% O2)</b>
EUTURBINE1	15.3	9.5
EUTURBINE2	15.2	15.0
EUTURBINE3	15.2	13.0
<b>Permit Limit</b>		<b>91</b>

# DTE

## 1.0 INTRODUCTION

DTE Energy's Environmental Management and Safety (EM&S) Ecology, Monitoring, and Remediation performed emissions testing at the DTE Gas Company – Milford Compressor Station, located in Milford, Michigan. The fieldwork, performed February 20-22, 2024, was conducted to satisfy requirements of the Michigan Department of Environment, Great Lakes, and Energy (EGLE) Michigan Renewable Operating Permit MI-ROP-B7221-2020 and 40 CFR Part 63 Subpart YYY. Emissions tests were performed on Solar Turbines 2100 (EUTURBINE1), 2200 (EUTURBINE2), and 3100 (EUTURBINE3) for formaldehyde (CH<sub>2</sub>O).

The fieldwork was performed in accordance with EPA Reference Methods and DTE Energy's Intent to Test<sup>1</sup>. The following DTE personnel participated in the testing program: Mr. Thomas Snyder, Senior Environmental Specialist, and Mr. Mark Grigereit, Principal Engineer. Mr. Snyder was the project leader. Mr. Jesse Anderson, operator, and repair technician at the station, provided process coordination for the testing program.

## 2.0 SOURCE DESCRIPTION

The DTE Gas Company – Milford Compressor Station located at 3515 Childs Lake Road, Milford, Michigan employs the use of three (3) identical Solar Model Taurus 70, natural gas fired turbines at the facility. The turbines generate line pressure assisting with the transmission of natural gas through the pipeline transmission system in SE Michigan. The turbines are all simple cycle design, nominally rated at 10,504 horsepower (ISO), with low NO<sub>x</sub> combustors for NO<sub>x</sub> control.

While MI-ROP-B7221-2020 allows for the installation of a total of five (5) gas compression turbines, only the three addressed in this report have been installed to date.

Figure 1 presents a schematic of the sampling location for each turbine. The exhaust on each turbine is identical.

## 3.0 SAMPLING AND ANALYTICAL PROCEDURES

DTE Energy obtained emissions measurements in accordance with procedures specified in the USEPA *Standards of Performance for New Stationary Sources*. The sampling and analytical methods used in the testing program are indicated in the table below:

---

<sup>1</sup> EGLE, Test Plan, Submitted December 11, 2023. (Attached-Appendix A)

# DTE

Sampling Method	Parameter	Analysis
USEPA Method 3A	Oxygen	Paramagnetic Analyzer
USEPA Method 320	Formaldehyde	Fourier Transform Infrared (FTIR)

## 3.1 OXYGEN (USEPA METHOD 3A)

### 3.1.1 Sampling Method

Exhaust Oxygen (O<sub>2</sub>) content was measured using USEPA Method 3A, "Determination of Oxygen and Carbon Dioxide Concentrations in Emissions from Stationary Sources (Instrumental Analyzer Procedure)". The O<sub>2</sub> analyzer utilizes a paramagnetic sensor. Triplicate 60-minute tests were performed on each turbine's exhaust. O<sub>2</sub> testing was performed simultaneously with the gaseous emissions testing.

Samples were measured on a dry basis (i.e. sample was conditioned prior to introduction into the diluent analyzers).

### 3.1.2 Sampling Train

The EPA Methods 3A sampling system consisted of the following components:

- (1) Heated Teflon™ sampling line, drawing sample from FTIR exhaust.
- (2) Universal® gas conditioner with particulate filter.
- (3) Flexible unheated Teflon™ sampling line.
- (4) Servomex 4900 O<sub>2</sub> gas analyzer
- (5) Appropriate USEPA Protocol 1 calibration gasses
- (6) Data Acquisition System.

Refer to Figure 2 for a schematic of the sampling train.

### 3.1.3 Sampling Train Calibration

The O<sub>2</sub> analyzer was calibrated according to procedures outlined in USEPA Methods 3A and 7E. Zero, span, and mid-range calibration gases were introduced directly into the analyzer to determine the instruments linearity. Then a zero and mid-range span gas was introduced through the entire sampling system to determine sampling system bias. System calibrations were performed prior to, and at the conclusion of, each test period.

### 3.1.4 Sampling Duration & Frequency

Oxygen (O<sub>2</sub>) sampling was performed during all CH<sub>2</sub>O sampling. Concentration averages were logged at 10-second intervals.

# DTE

### **3.1.5 Quality Control and Assurance**

All sampling and analytical equipment was calibrated according to the guidelines referenced in Methods 3A and 7E. Calibration gases were EPA Protocol 1 gases. Calibration gas concentrations were within the acceptable ranges specified in Method 7E.

Field calibration data sheets and gas certification sheets are in Appendix C.

### **3.1.6 Data Reduction**

The O<sub>2</sub> (%) readings were logged at 10-second intervals and recorded in 1-minute increments. CH<sub>2</sub>O emissions are reported in parts per billion, dry, corrected to 15% O<sub>2</sub> (ppb @ 15% O<sub>2</sub>) for comparison to the emission limit.

Raw CEM data is presented in Appendix B.

## **3.2 FORMALDEHYDE (CH<sub>2</sub>O) (USEPA METHOD 320)**

### **3.2.1 Sampling Method**

Formaldehyde (CH<sub>2</sub>O) emissions were evaluated using USEPA Method 320, "Measurement of Vapor Phase Organic Emissions by Extractive Fourier Transform Infrared (FTIR)". Triplicate 60-minute test runs were performed.

The Method 320 sampling system (Figure 2) consisted of the following:

- (1) Single-point sampling probe
- (2) Flexible heated PTFE sampling line
- (3) Air Dimensions Heated Head Diaphragm Pump
- (4) ThermoFisher™ MAX-iR with Starboost™ FTIR spectrometer
- (5) ThermoFisher™ Thermal Oxidizer Module
- (6) Appropriate calibration gases
- (7) Data Acquisition System

The FTIR was equipped with a temperature controlled, 10 meter, high throughput, multipass gas cell maintained at 191°C. Gas flows and sampling system pressures were monitored using a rotometer and pressure transducer. All data was collected at 1 cm<sup>-1</sup> resolution.

### **3.2.2 Sampling Train Calibration**

The FTIR was calibrated per procedures outlined in Method 320. Direct measurements of formaldehyde (CH<sub>2</sub>O) gas standards were made at the test location to confirm concentrations.

# DTE

A calibration transfer standard (CTS) was analyzed before and after testing at each location. The concentration determined for all CTS runs were within  $\pm 5\%$  of the certified value of the standard. Ethylene was passed through the entire system to determine the sampling system response time and to ensure that the entire sampling system was leak-free.

Nitrogen was purged through the sampling system at each test location to confirm the system was free of contaminants. Formaldehyde ( $\text{CH}_2\text{O}$ ) gas standards were passed through the sampling system at each test location to determine the response time and confirm recovery.

Formaldehyde ( $\text{CH}_2\text{O}$ ) spiking with Thermal Oxidizer Module in bypass mode was performed to verify the ability of the sampling system to quantitatively deliver a sample containing  $\text{CH}_2\text{O}$  from the base of the probe to the FTIR. Analyte spiking assures the ability of the FTIR to quantify  $\text{CH}_2\text{O}$  in the presence of effluent gas.

Formaldehyde ( $\text{CH}_2\text{O}$ ) spiking with Thermal Oxidizer Module activated was performed to verify target analyte removal, and to demonstrate the efficiency of the Thermal Oxidizer Module.

As part of the spiking procedure, samples from each turbine were measured to determine  $\text{CH}_2\text{O}$  concentrations to be used in the spike recovery calculations. The determined nitrous oxide ( $\text{N}_2\text{O}$ ) concentration in the spiked and unspiked samples was used to calculate the dilution factor of the spike and thus used to calculate the concentration of the spiked  $\text{CH}_2\text{O}$ . The following equation illustrates the percent recovery calculation.

$$DF = \frac{N_2O(\text{spike})}{N_2O(\text{direct})} \quad (\text{Sec. 9.2.3 (3) Method 320})$$

$$CS = DF * \text{Spike}_{\text{dir}} + \text{Unspike} (1 - DF) \quad (\text{Sec. 9.2.3 (4) Method 320})$$

DF = Dilution factor of the spike gas

$N_2O(\text{direct})$  =  $N_2O$  concentration measured directly in undiluted spike gas

$N_2O(\text{spike})$  = Diluted  $N_2O$  concentration measured in a spiked sample

$\text{Spike}_{\text{dir}}$  = Concentration of the analyte in the spike standard measured by the FTIR directly

CS = Expected concentration of the spiked samples

Unspike = Native concentration of analytes in unspiked samples



All analyte spikes were introduced using an instrument grade stainless steel rotometer. The spike target dilution ratio was 1:10 or less. All CH<sub>2</sub>O spike recoveries were within the EPA Method 320 allowance of  $\pm 30\%$ .

### **3.2.3 Quality Control and Assurance**

The method validation procedure in Method 320 Section 13 was completed on July 26, 2022 at Milford Compressor Station. The validation source was a combustion gas turbine fired with natural gas equipped with like-kind emission controls as the unit/units tested in this report. Each validation spiked sample was preceded and followed by an unspiked sample. The results of the study were provided in the 2022 Milford Compressor Station YYYY compliance report which was approved by EGLE. The results of the validation study showed no significant bias, therefore emissions data is not corrected to %R.

As part of the data validation procedure, reference spectra are manually fit to that of the sample spectra and a concentration is determined. The reference spectra are scaled to match the peak amplitude of the sample, thus providing a scale factor. The scale factor multiplied by the reference spectra concentration is used to determine the concentration value for the sample spectra. Sample pressure and temperature corrections are then applied to compute the final sample concentration. The manually calculated results are then compared with the software-generated results. The data is then validated if the two concentrations are within  $\pm 5\%$  agreement. If there is a difference greater than  $\pm 5\%$ , the spectra are reviewed for possible spectral interferences or any other possible causes that might lead to inaccurately quantified data. Prism Analytical Technologies, Inc. validated the FTIR data. The data validation reports are in Appendix E.

### **3.2.4 Data Reduction**

Each spectrum was derived from the coaddition of 55 scans, with a new data point generated approximately every minute. The CH<sub>2</sub>O emissions were recorded in parts per billion (ppb) wet volume basis. Moisture content (%) was also recorded. The O<sub>2</sub> emissions were recorded in percent (%) dry volume basis.

The O<sub>2</sub> (%) and CH<sub>2</sub>O (ppbvd) readings were logged at 10-second intervals and recorded in 1-minute increments. CH<sub>2</sub>O emissions are reported in parts per billion dry, corrected to 15% O<sub>2</sub> (ppb @ 15% O<sub>2</sub>) for comparison to the emission limit.



#### **4.0 OPERATING PARAMETERS**

The test program included the collection of turbine operating data during each test run. Parameters recorded included % Load (reported as horsepower), speed (%NGP), inlet air temperature, gross dry BTU, fuel gas flow, compressor discharge pressure, and compressor discharge temperature.

Operational data can be found in Appendix E.

#### **5.0 RESULTS**

Testing was performed while the turbine was operated in LoNO<sub>x</sub> mode while operating at the highest achievable load. The results of the formaldehyde (CH<sub>2</sub>O) emissions testing conducted on EUTURBINE1, EUTURBINE2, and EUTURBINE3 are presented in Results Table Nos. 1-3.

EUTURBINE1, EUTURBINE2, and EUTURBINE3 demonstrated compliance with 40 CFR Part 63, Subpart YYY formaldehyde (CH<sub>2</sub>O) emission limit of 91 ppb @ 15% O<sub>2</sub>.



## 6.0 CERTIFICATION STATEMENT

"I certify that I believe the information provided in this document is true, accurate, and complete. Results of testing are based on the good faith application of sound professional judgment, using techniques, factors, or standards approved by the Local, State, or Federal Governing body, or generally accepted in the trade."

Mr. Thomas Snyder, QSTI

This report prepared by:

Mr. Thomas Snyder, QSTI  
Sr. Environmental Specialist,  
Ecology, Monitoring, & Remediation  
Environmental Management & Safety  
DTE Energy Corporate Services, LLC

This report reviewed by:

Mr. Mark Grigereit, QSTI  
Principal Engineer,  
Ecology, Monitoring, & Remediation  
Environmental Management & Safety  
DTE Energy Corporate Services, LLC

# DTE

RESULTS TABLES



**TABLE NO. 1**  
**FORMALDEHYDE EMISSIONS TEST RESULTS**  
**DTE Gas - Milford Compressor Station**  
**EUTURBINE3 (Unit 3100)**  
**February 20, 2024**

<b>Test</b>	<b>Test Time</b>	<b>Unit Load (%)<sup>2</sup></b>	<b>O<sub>2</sub> Concentration (% dry)<sup>1</sup></b>	<b>CH<sub>2</sub>O Concentration (ppbvd)</b>	<b>CH<sub>2</sub>O Concentration (ppbvd @ 15% O<sub>2</sub>)</b>
1	10:22-11:22	101%	15.2	16.4	16.9
2	11:32-12:32	100%	15.2	5.8	5.9
3	12:41-13:41	99%	15.2	15.6	<u>16.1</u>
				<b>Ave:</b>	<b>13.0</b>
				<b>Permit Limit:</b>	<b>91</b>

<sup>1</sup>corrected for analyzer drift as per USEPA Method 7E

<sup>2</sup>calculated as actual average horse power divided by 10,504 (nominal rated horsepower)



**TABLE NO. 2**  
**FORMALDEHYDE EMISSIONS TEST RESULTS**  
**DTE Gas - Milford Compressor Station**  
**EUTURBINE1 (Unit 2100)**  
**February 21, 2024**

<b>Test</b>	<b>Test Time</b>	<b>Unit Load (%)<sup>2</sup></b>	<b>O<sub>2</sub> Concentration (% dry)<sup>1</sup></b>	<b>CH<sub>2</sub>O Concentration (ppbvd)</b>	<b>CH<sub>2</sub>O Concentration (ppbvd @ 15% O<sub>2</sub>)</b>
1	9:11-10:11	90%	15.2	11.3	11.8
2	10:23-11:23	89%	15.3	11.5	12.1
3	11:35-12:35	88%	15.3	4.4	<u>4.6</u>
				<b>Ave:</b>	<b>9.5</b>
				<b>Permit Limit:</b>	<b>91</b>

<sup>1</sup>corrected for analyzer drift as per USEPA Method 7E

<sup>2</sup>calculated as actual average horse power divided by 10,504 (nominal rated horsepower)



**TABLE NO. 3**  
**FORMALDEHYDE EMISSIONS TEST RESULTS**  
**DTE Gas - Milford Compressor Station**  
**EUTURBINE2 (Unit 2200)**  
**February 22, 2024**

<b>Test</b>	<b>Test Time</b>	<b>Unit Load (%)<sup>2</sup></b>	<b>O<sub>2</sub> Concentration (% dry)<sup>1</sup></b>	<b>CH<sub>2</sub>O Concentration (ppbvd)</b>	<b>CH<sub>2</sub>O Concentration (ppbvd @ 15% O<sub>2</sub>)</b>
1	8:34-9:34	91%	15.2	15.2	15.6
2	9:54-10:54	89%	15.2	19.1	19.9
3	11:03-12:03	92%	15.2	9.3	<u>9.7</u>
				<b>Ave:</b>	<b>15.0</b>
				<b>Permit Limit:</b>	<b>91</b>


<sup>1</sup>corrected for analyzer drift as per USEPA Method 7E

<sup>2</sup>calculated as actual average horse power divided by 10,504 (nominal rated horsepower)

# DTE

FIGURES

Figure 1. Sampling Location  
Milford Compressor Station  
EUTURBINE1-3

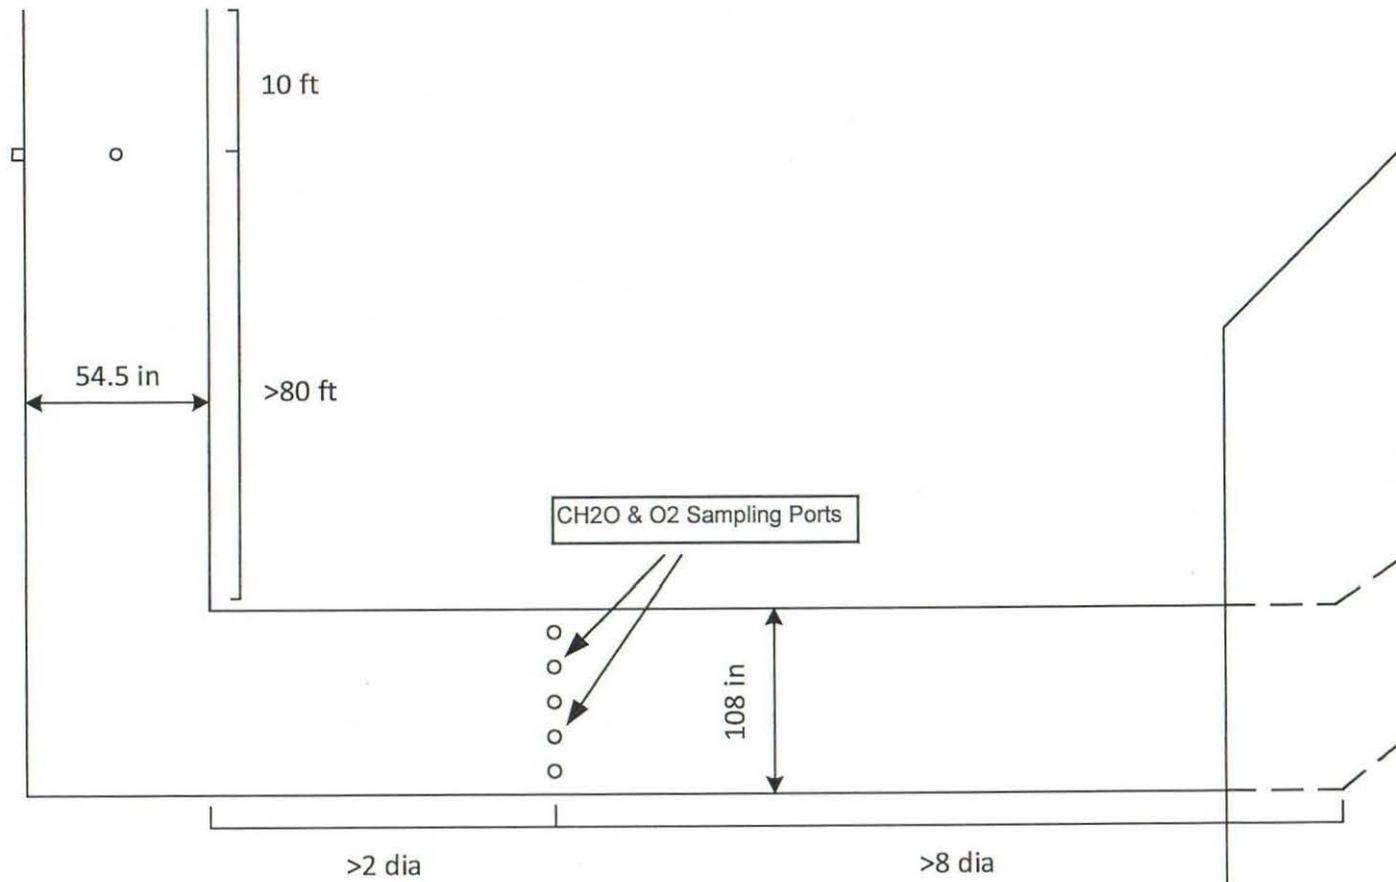

**Figure 2. Method 320/3A  
Milford Compressor Station  
EUTURBINE1-3**

